
AR88.20-P-2200GK	Remove/install rear bumper	26.2.01

MODEL 163.113 #A as of 289565,
163.113 #X as of 754620,
163.154 #A as of 289565,
163.128 /157 /175

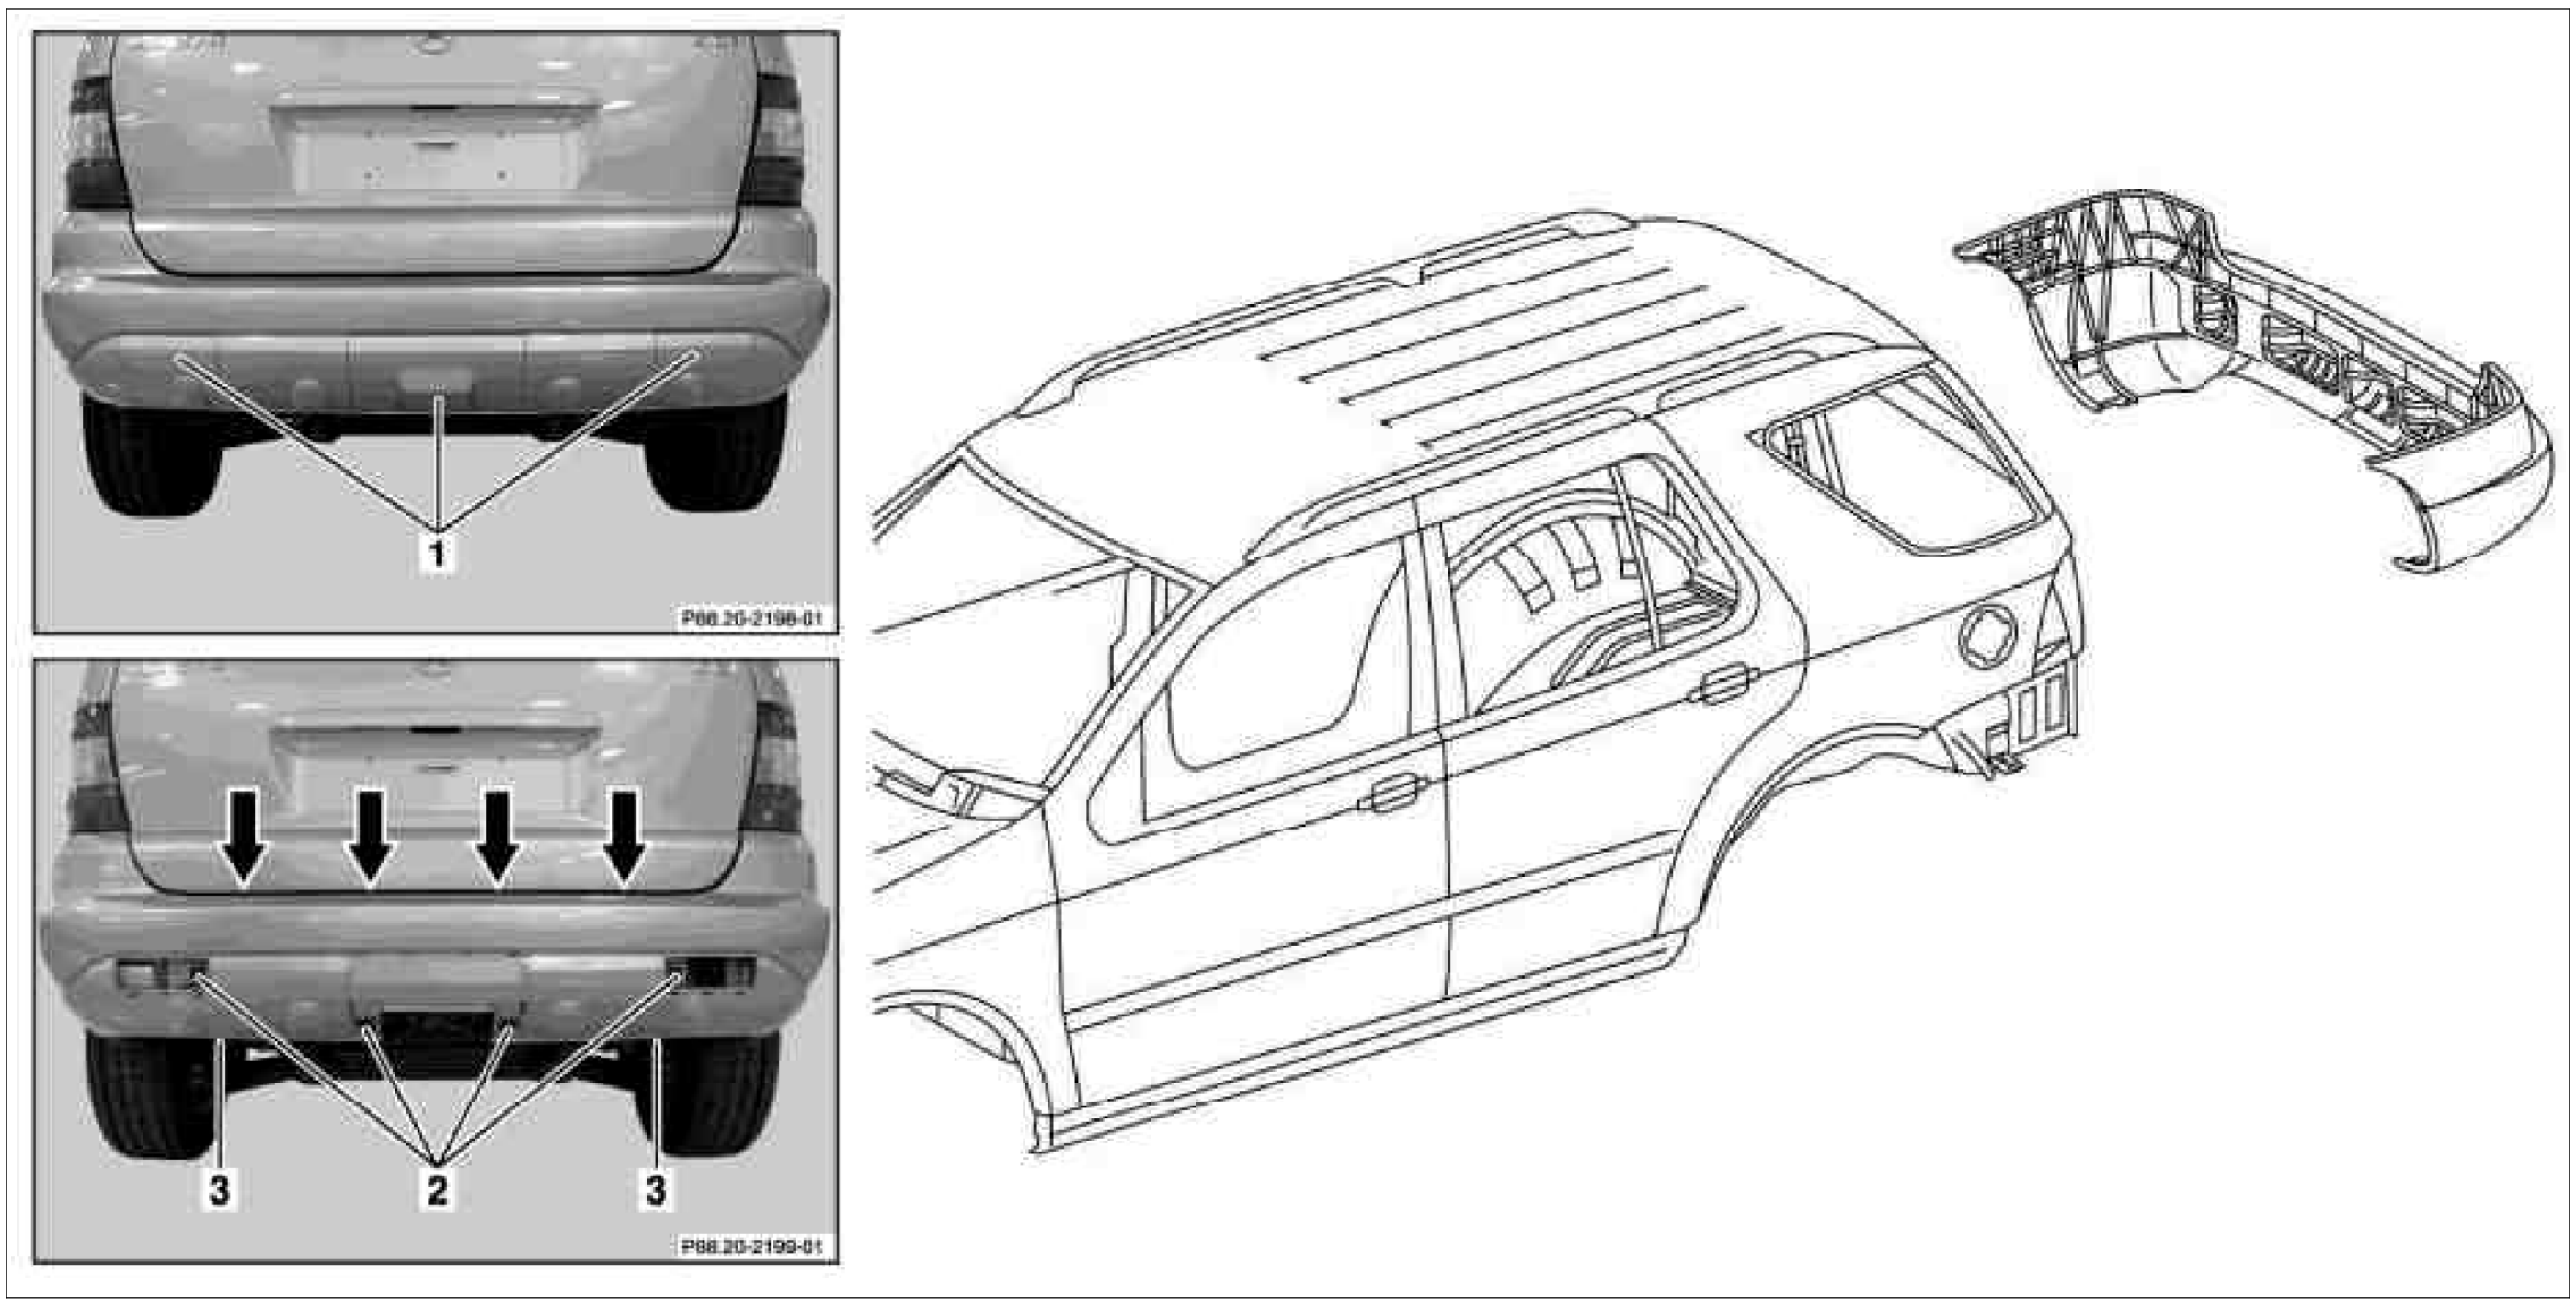

P88.20-2200-09


	Remove/Install		
1.1	Disconnect antenna connector of E-call emergency call system	Only with emergency call system E-Call, code 349. The connector is located behind side flap on right C-pillar paneling at vehicle jacking point.	
2	Remove panelings (1)	Do not damage paint. Do not break off clips. Installation wedge	*115589035900
3	Remove screws (2)	Nm	*BA88.20-P-1008-01B
4.1	Remove nut for dirt trap retaining strap from vehicle underbody	Only if present Nm	*BA88.30-P-1004-01A
5	Pull bumper toward rear and remove	Do not damage paint/wiring harness. Pull directly over clips (arrows) and detach from bracket. **Installation:** Align bumper at tailgate and at taillamps	
6.1	Remove rubber seal for E-call emergency call system antenna from body at right	Only with emergency call system E-Call, code 349.	
7.1	Detach connector from Parktronic system	Only with Parktronic system (PTS), code 220a. Remove left rubber seal from body.	
8	Install in the reverse order		

Nm **Bumper**

Number	Designation		Model 163
BA88.20-P-1008-01B	Screw for rear bumper on mount	Nm	8

Nm Detachable body components, underride guard

Number	Designation		Model 163 as of 1.9.01
BA88.30-P-1004-01A	Nut for retaining strap on mud guard on vehicle underbody	Nm	6

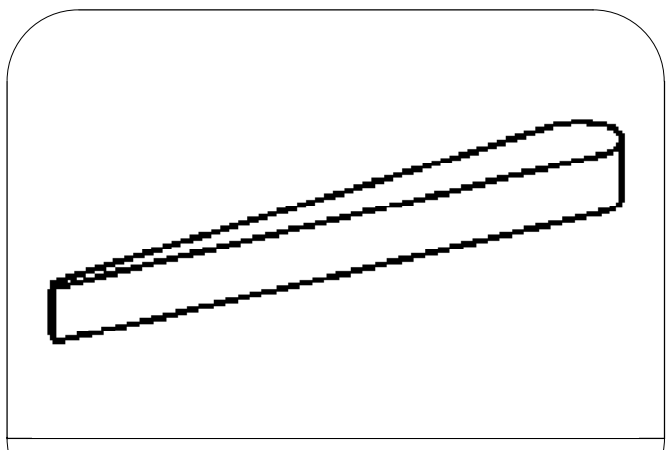

115 589 03 59 00

Long wedge